




NOTICE

**CHECK BREATHER PLUG LOCATION BEFORE INSTALLATION OF DRIVE UNIT
CHECK OIL FILL LEVEL BEFORE OPERATION**

SYMBOL	MEANING
	Breather Valve
	Oil Level Plug ¹⁾

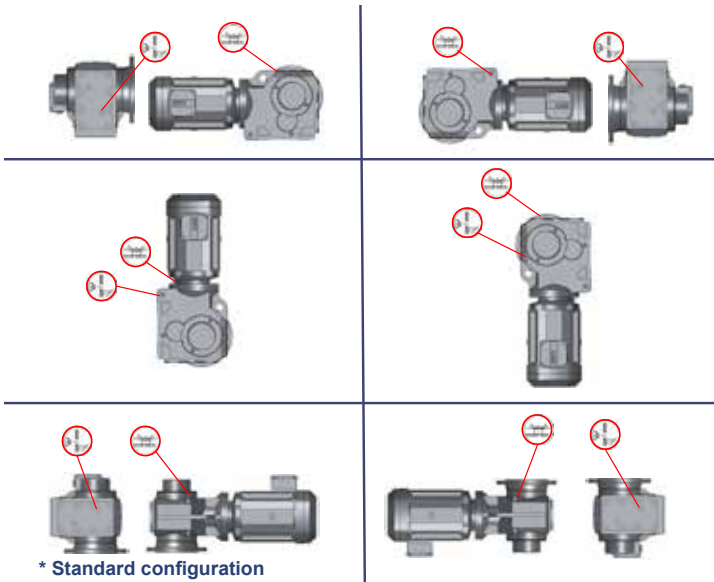

Oil level will be affected if installed in other position than standard configuration.
Check oil level before operating unit.

1-800-247-3344 | cablevey.com
email: info@cablevey.com